
EK-Quantum Vector² Trio RTX 3080/90 ABP Set D-RGB



GPU WATER BLOCK

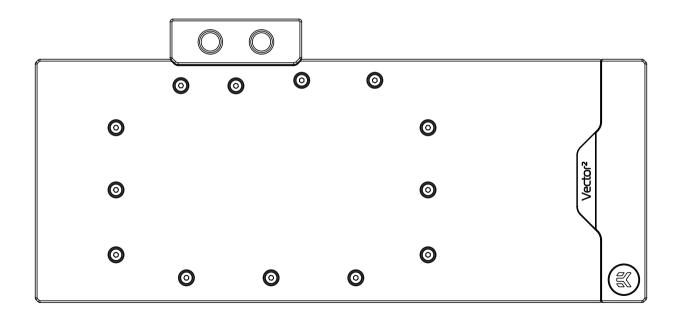

This product is intended for installation by expert users only. Please consult with a qualified technician. Improper installation may result in damage to your equipment. EK assumes no liability whatsoever, expressed or implied, for the use of this product or its installation. The following instructions are subject to change without notice. Please, read the manual carefully before starting the installation process. For updates, you can visit our official website **www.ekwb.com**.

Before you start using this product, please follow these basic guidelines:

Carefully read the manual before beginning with the installation process.

Remove your graphics card from the computer for the safest mounting process to prevent any possible damage to your GPU or its circuit board (PCB).

The EK Fittings require only a small amount of force to screw them firmly in place since the liquid seal is ensured by the rubber O-ring gaskets.

The use of corrosion inhibiting coolants is always recommended for liquid cooling systems and mandatory for nickel-plated water blocks!

Do not use pure distilled water!


For best results, EK recommends the use of EK-CryoFuel coolants! To reach optimal performance, make sure to thoroughly bleed the air out of your water block!

TABLE OF CONTENTS


BOX CONTENTS	4
WATER BLOCK DIMENSIONS	5
TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS	6
NICKEL PLEXI	6
NICKEL ACETAL	7
PREPARING THE GRAPHICS CARD	8
OPTION 1: USING THE MSI GEFORCE 3080/90 SUPRIM X	8
REMOVING THE STOCK COOLER AND BACKPLATE	8
OPTION 2: USING THE MSI GEFORCE RTX 3080/90 GAMING X TRIO	9
CLEANING THE PCB	10
PREPARING THE WATER BLOCK FOR INSTALLATION	10
CUTTING AND PLACING THERMAL PADS	12
APPLYING THERMAL COMPOUND	13
ATTACHING THE WATER BLOCK	13
ATTACHING THE ACTIVE BACKPLATE	15
FITTINGS AND TUBING	18
INSERTING THE GRAPHICS CARD INTO THE CHASSIS	18
CONNECTING THE D-RGB LED STRIP	19
TESTING THE LOOP	19
WARRANTY	20
SUPPORT AND SERVICE	21
SOCIAL MEDIA	21

BOX CONTENTS


EAN: 104909

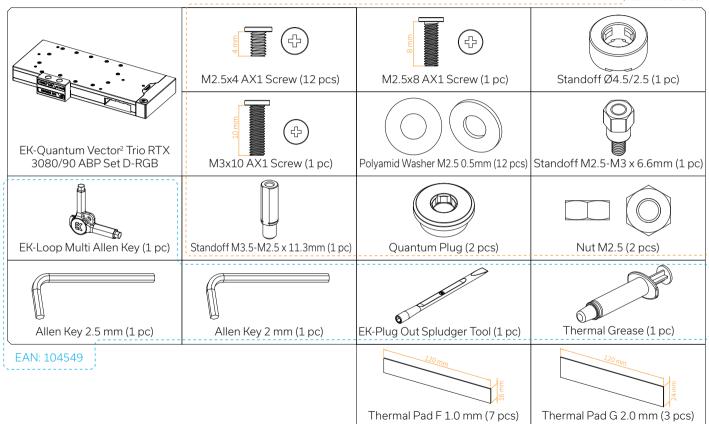

WATER BLOCK DIMENSIONS

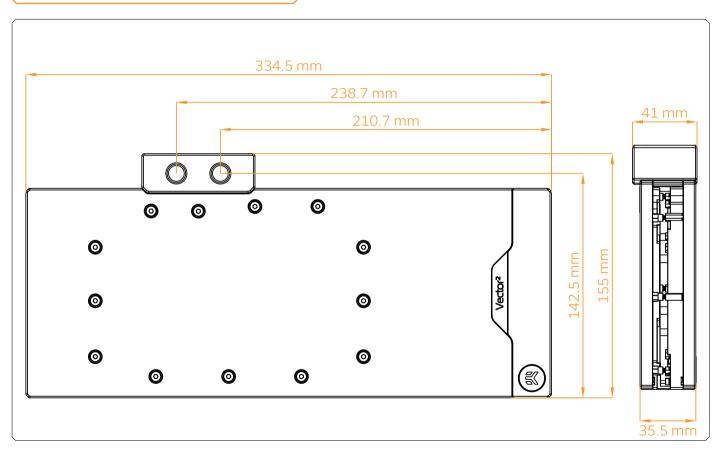


TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS

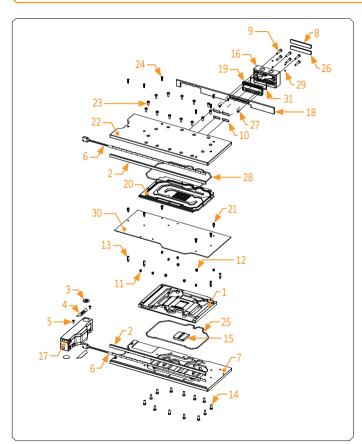

NICKEL PLEXI

- Dimensions: (LxHxW): 334.5 x 155 x 41mm
- D-RGB LED count: 18
- D-RGB cable length: 50cm
- D-RGB connector 3-pin 5V digital LED header

Position	EAN	Description	Quantity
1	104464	Coldplate WB (Nickel)	1
2	104470	LED Cover	2
3	100663	EK - Badge	2
4	103964	Mylar sticker	2
5	8208	Screw M3 x 8 7991DIN	2
6	101556	LED D-RGB strip 500/300 mm	2
7	104468	Top plate WB (Plexi)	1
8	103942	Terminal Badge	1
9	8311	Screw M4 x 20 DIN7984	6
10	104106	Terminal OR - 14 x 1 mm	4
11	103987	Standoff M3.5-M2.5 x 3	7
12	103988	Standoff M4-M2.5 x 3 mm	4
13	103986	Standoff M3.5-M2.5 x 11.3 mm	4
14	9024	Screw M4 x 10 DIN7984	13
15	103962	Plexi insert	1
16	104393	FC Terminal (Acetal)	1
17	104099	Stand out (Acetal)	1
18	104480	Sideplate (Black e.)	1
19	104395	Terminal plate	1
20	104466	Coldplate ABP (Nickel)	1
21	104093	Standoff M2.5-M3 x 6.6	6
22	104482	Top plate ABP (Plexi)	1
23	9013	Screw M4 x 8 DIN7984	13
24	104105	Screw AX1 M3 x 10	6
25	104485	Main O-ring ABP 160 x 2 mm	1
26	104086	Terminal badge	1
27	8201	Screw M3 x 10 DIN7991	2
28	104484	Main O-ring WB 162 x 2 mm	1
29	105163	Disc magnet 3 x 2	4
30	104902	PCB cardboard	1
31	104414	Terminal bottom O-ring 50 x 2 mm	1

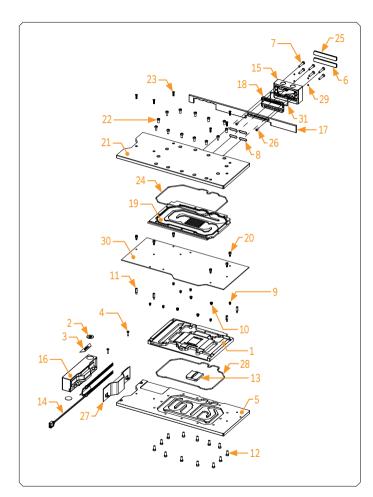


NICKEL ACETAL

- Dimensions: (LxHxW): 334.5 x 155 x 41mm
- D-RGB LED count: 38
- D-RGB cable length: 50cm D-RGB connector 3-pin 5V digital LED header

Position	EAN	Description	Quantity
1	104465	Coldplate WB (Nickel)	1
2	100663	EK- Badge	2
3	104211	Mylar sticker	2
4	8202	Screw M3 x 12 DIN7991	2
5	104469	Top plate WB (Acetal)	1
6	103942	Terminal Badge	1
7	8311	Screw M4 x 20 DIN7984	6
8	104106	Terminal OR - 14 x 1 mm	4
9	103987	Standoff M3.5-M2.5 x 3	7
10	103988	Standoff M4-M2.5 x 3 mm	4
11	103986	Standoff M3.5-M2.5 x 11.3 mm	4
12	9024	Screw M4 x 10 DIN7984	13
13	103962	Plexi insert	1
14	104296	LED D-RGB Dense Strip Double - 500/130 mm	1
15	104393	FC Terminal (Acetal)	1
16	104102	Stand out (Acetal)	1
17	104480	Sideplate (Black e.)	1
18	104395	Terminal plate (Nickel)	1
19	104467	Coldplate ABP (Nickel)	1
20	104093	Standoff M2.5-M3 x 6.6	6
21	104483	Top plate ABP (Acetal)	1
22	9013	Screw M4 x 8 DIN7984	13
23	104105	Screw AX1 M3 x 10	6
24	104485	Main O-ring ABP 160 x 2 mm	1
25	104086	Terminal badge	1
26	8201	Screw M3 x 10 DIN7991	2
27	104096	Light guide	1
28	104484	Main O-ring 162 x 2 mm	1
29	105163	Disc magnet 3 x 2	4
30	104902	PCB cardboard	1
31	104414	Terminal bottom O-ring 50 x 2 mm	1

PREPARING THE GRAPHICS CARD

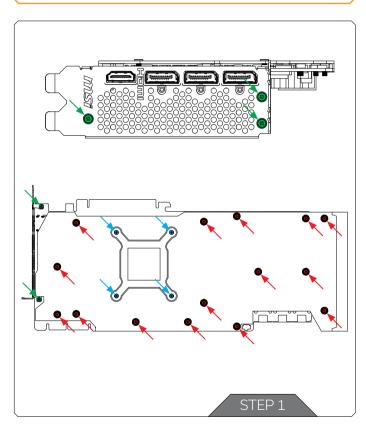

OPTION 1: USING THE MSI GEFORCE 3080/90 SUPRIM X

For this Step, you will need:



STEP 1 REMOVING THE STOCK COOLER AND BACKPLATE


Place your graphics card on the flat surface and carefully remove the stock cooler. Do not forget to unplug all the LED and fan connectors. Pay attention to the following steps in order to install the EK-Quantum Vector² Trio RTX 3080/90 D-RGB water block on the graphics card.

Use the Phillips head screwdriver to remove the five (5) green marked screws from the GPU bracket side

Then remove the fifteen (15) red marked screws with Phillips head screwdriver and carefully detach the stock backplate from the PCB. After removing the stock backplate remove four (4) blue marked screws on retention bracket and you can move to step 2 of the process.



Always remove the stock cooler slowly - it might be firmly glued to the PCB with thermal pads.

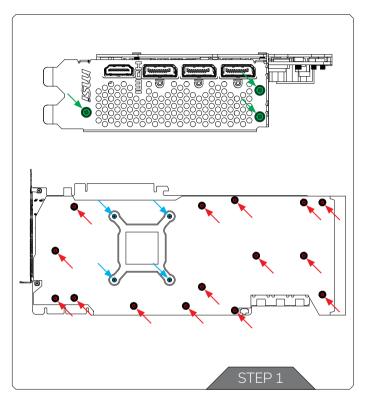

OPTION 2: USING THE MSI GEFORCE RTX 3080/90 GAMING X TRIO

STEP 1

Place your graphics card on the flat surface and carefully remove the stock cooler. Do not forget to unplug all the LED and fan connectors. Pay attention to the following steps in order to install the EK-Quantum Vector² Trio RTX 3080/90 D-RGB water block on the graphics card.

Use the Phillips head screwdriver to remove the three (3) green marked screws from the GPU bracket side.


Then remove the fifteen (15) red marked screws with Phillips head screwdriver and carefully detach the stock backplate from the PCB. After removing the stock backplate remove four (4) blue marked screws on retention bracket and you can move to step 2 of the process.



Always remove the stock cooler slowly - it might be firmly glued to the PCB with thermal pads.




CLEANING THE PCB

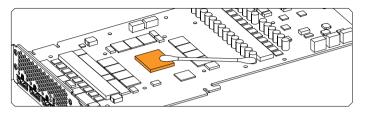

Carefully detach the original stock cooler after removing all screws that are securing it to the board. Wipe off the remains of the original thermal compound using a nonabrasive cloth or Q-tip, as shown in the sample image, until the components and circuit board are completely clean. EK recommends the use of denatured alcohol for removing TIM leftovers.

PREPARING THE WATER BLOCK FOR INSTALLATION

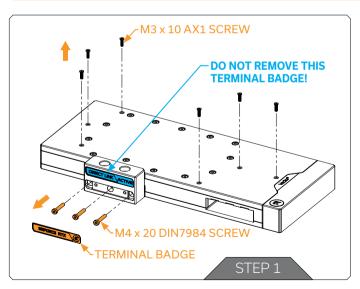


STEP 1


First, remove the terminal badge which is attached to the terminal with two magnets. Under the badge, unscrew three (3) screws M4 x 20 DIN7984. Additional six (6) screws M3 x 10 AX1 need to be removed (as shown in the image).



DO NOT REMOVE THE UPPER TERMINAL BADGE!

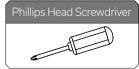




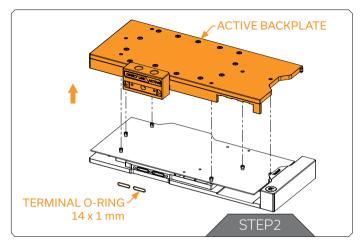

STEP 2

Carefully remove the complete active backplate with the terminal. Additional two (2) O-rings 14x1 EPDM50 need to be removed.

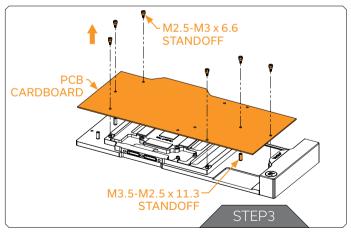


STEP 3


Unscrew six (6) M2.5-M3x6.6 standoff with the included tool (EK-Plug out Spludger Tool). Make sure not to unscrew the M3.5-M2.5 x 11.3 standoff! In case the M3.5-M2.5 x 11.3 standoff unscrews, carefully tighten it back with the 4 mm wrench.

After removing the standoffs, the PCB cardboard needs to be removed. The PCB cardboard is printed on 1:1 scale.



CUTTING AND PLACING THERMAL PADS

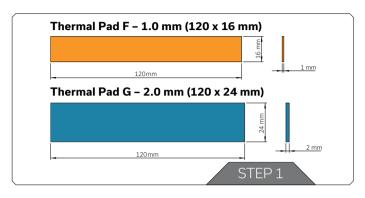

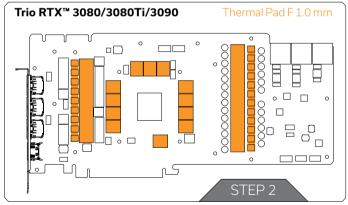

STEP 1

Your GPU water block comes with thermal pads that have to be cut into smaller pieces to cover all the VRM components, such as COILs, MOSFETs, and drivers.



You must remove the protective foil from both sides of the thermal pad before installation.

Replacement thermal pads:

Thermal Pad F 1.0 mm – $(120 \times 16 \text{ mm})$ EAN: 3830046996732 Thermal Pad G 2.0 mm – $(120 \times 24 \text{ mm})$ EAN: 3830046996794

STEP 2


The cardboard is printed in scale 1:1. Cut Thermal Pads to the size printed on the cardboard. Once cut to the size, Thermal Pads should be placed on the block, as shown in the picture.



Before attaching the PCB to the Water Block, make sure all the Thermal Pads are placed correctly!



APPLYING THERMAL COMPOUND

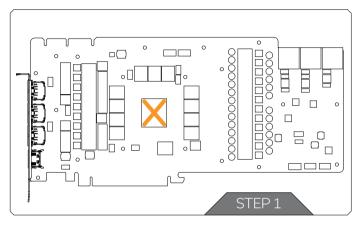

STEP 1

Apply the enclosed EK-TIM Ectotherm thermal grease (thermal compound) on the GPU heat spreader – IHS – as shown in the image. The layer of the thermal compound must be thin and even over the entire surface of the IHS.




The excessive or uneven application of thermal grease may lead to poor performance!

For this Step, you will need:



ATTACHING THE WATER BLOCK

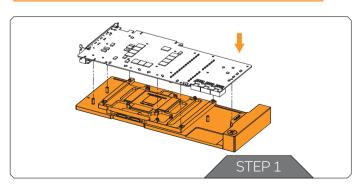

STEP 1


Carefully position the water block with preinstalled standoffs on the graphics card. During this process, make sure you have aligned mounting holes of the PCB with holes of the water block.



Pay attention not to use too much force when pressing the block down to the PCB since chip dies are prone to cracking.



Before attaching the PCB to the Water Block, make sure all the Thermal Pads are placed correctly!

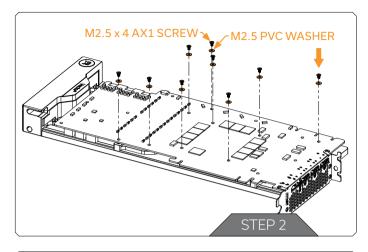


STEP 2

After placing the water block, use nine (9) M2.5 x 4 AX1 screws and PVC washers to tighten the GPU PCB. Tighten the screws evenly. EK recommends you start tightening the screws around the GPU core first and then continuing outward to prevent damaging the GPU. Always use a plastic washer under each screw.

For this step, you will need:



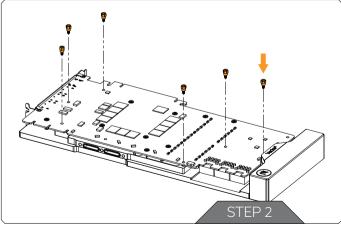


STEP 2

Place the M2.5-M3 \times 6.6 Standoff in each of the (6) mounting holes of the standoff M3.5-M2.5 \times 11.3 (as shown in the image) and tighten them evenly with the EK-Plug-Out Spludger Tool.

Do not use excessive force!



ATTACHING THE ACTIVE BACKPLATE

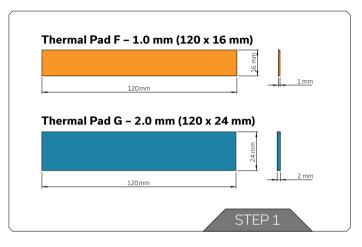

STEP 1

After attaching the water block, a few more thermal pads need to be placed on the backside of the GPU PCB. Once cut to size, thermal pads should be placed on the PCB, as illustrated. EK made sure to provide you with more than an adequate quantity of thermal pads to complete this Step.





CAUTION: You must remove the protective foil from both sides of the thermal pad before installation.

Replacement thermal pads:

Thermal Pad F 1.0mm – $(120 \times 16 \text{ mm})$ EAN: 3830046996732 Thermal Pad G 2.0mm – $(120 \times 24 \text{ mm})$ EAN: 3830046996794



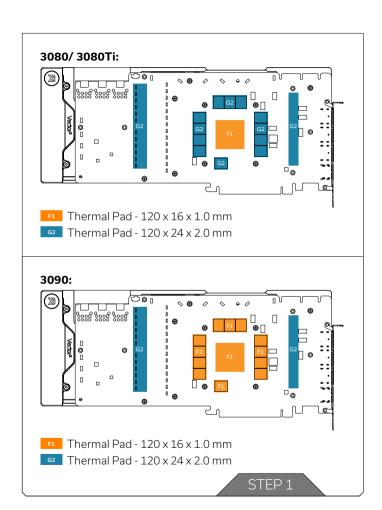

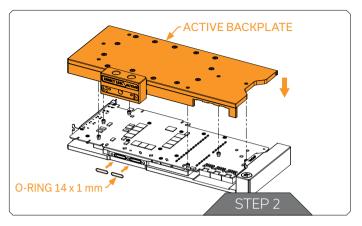


STEP 2

Put two O-rings 14×1 into slots on the cold plate. Then carefully place the active backplate on standoffs as shown in the image. While putting the active backplate on the PCB, make sure the O-rings stay in the slots.



Before attaching the Active Backplate, make sure all the Thermal Pads are placed correctly!

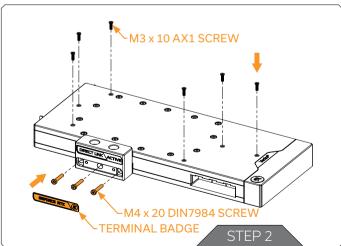



STEP 2

Place six (6) M3 x 10 AX1 screws into the water block standoffs and tighten them using Philips head screwdriver (as shown in the image). After attaching the AX1 Screws, three (3) terminal screws M4 x 20 DIN7984 need to be attached using Allen Key 2.5mm. The terminal badge can be reused, after securing the terminal screws.




Pay attention not to use too much force when tightening the active backplate.

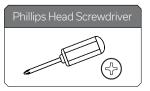

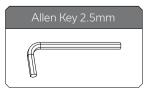

FITTINGS AND TUBING

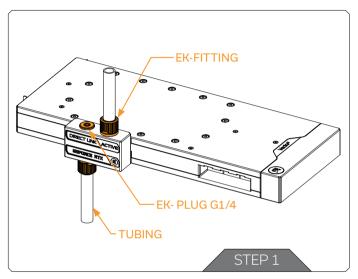

STEP 1

Screw-in two (2) G1/4 threaded male fittings. Attach the liquid cooling tubes and connect the water block to the cooling loop.



Do not forget to plug the remaining two openings using the enclosed EK-Plug G1/4 or its equivalent.

EK recommends using EK fittings with all EK water blocks.



CAUTION: When using connectors other than EK fittings, pay special attention to the length of the fittings' male G1/4" thread – 5mm is the maximum G1/4" thread length allowed!

For this step, you will need:




INSERTING THE GRAPHICS CARD INTO THE CHASSIS

Carefully lift your graphics card with the installed water block and insert it into your PC's motherboard PCI express expansion slot. Please keep in mind that your graphics card is heavier than before it was equipped with the water block.



You need to be very careful when handling the graphics card. Avoid all unnecessary manipulation of the water block assembly that might damage your card or water block.

CONNECTING THE D-RGB LED STRIP

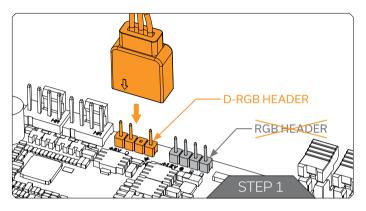

STEP 1

Plug the **3-pin connector** of the distribution plate D-RGB LED light to the **D-RGB HEADER** on the motherboard. The LED will work if the pin layout on the header is as follows: **+5V, Digital, Empty, Ground**.



Incorrect installation or installation to a wrong header can damage the LED strip or the header itself!

TESTING THE LOOP

To make sure the installation of EK components was successful, we recommend you perform a leak test for 24 hours. When your loop is complete and filled with coolant, connect the pump to a PSU outside of your system. Do not connect power to any of the other components. Turn on the PSU and let the pump run continuously. It is normal for the coolant level to drop during this process as air collects in the distribution plate. Inspect all parts of the loop, and in the eventuality that coolant leaks, fix the issue and repeat the testing process. Ensure that all hardware is dry before the system is powered on in order to prevent any damage.

WARRANTY

Our products are warranted against defects of materials and quality for a period of 24 months, starting with the date of delivery to the end-user. During this period, products will be repaired or have parts replaced at our discretion, provided that 1) the product is returned to the agent from whom it was purchased; 2) the product has been purchased by the end-user and has not been used for commercial purposes; 3) the product has not been misused, handled carelessly, or used in a manner other than the way described in the instructions manual. This warranty does not confer rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This warranty is offered as an extra benefit and does not affect your statutory rights as a consumer. This warranty is voided if the product comes in contact with aggressive UV additives or other improper liquids. EK water blocks are sealed with a warranty-voiding circular label, proving the water block has withstood a pressure leak test. Removing the label will void the leak-free guarantee, but not the quarantee on the product itself. Any other RMA issues can be reported to EK Customer Support at www.ekwb.com/support for further analysis.

SUPPORT AND SERVICE

In case you need assistance or wish to order spare parts or a new mounting mechanism, please contact:

https://www.ekwb.com/customer-support/

For spare parts orders, refer to the page with "TECHNICAL SPECIFICATIONS AND WATER BLOCK PARTS" where you can find the EAN number of each part you might need.

Include the EAN number with quantity in your request. Mounting Mechanism EAN can be found under "BOX CONTENTS"

Thermal pads are readily available in the EK shop

SOCIAL MEDIA

- **f** EKWaterBlocks
- @EKWaterBlocks
- ekwaterblocks
- EKWBofficial
- ekwaterblocks

